



### TILT CONTROLLER FUNCTIONS: (0-90 DEGREES)

1. To go to zero degree position press: "RUN, 0" (The display should show '00')  
(camera points straight down for vertical gimbal mounts)  
(camera points horizontally for gyro stabilized platforms)
2. To tilt the camera one degree up press: "+" one time  
(The display should show a change of one degree)
3. To tilt the camera one degree down press: "-" one time  
(The display should show a change of one degree)
4. To tilt the camera continuously up: hold down "+"  
(The display should update with change of angle)
5. To tilt the camera continuously down: hold down "-"  
(The display should update with change of angle)
6. To rotate incrementally 10 degrees clockwise press: "10, +"  
(The display should change by +10)
7. To rotate incrementally 10 degrees counter clockwise press: "10, -"  
(The display should change by -10)
8. To go to positive 10 degree tilt position press: "RUN, 10, +"  
(The display should show '10')
9. To clear the screen press: "0, 0"  
(The display should show the current tilt position)
10. You can stop a tilt motion at any time by pressing: "STOP"