



**TURNTABLE CONTROLLER FUNCTIONS:**  
(+/- 180 DEGREES)

1. To go to zero degree position press: "RUN, 0"  
(The display should show '00')
2. To rotate one degree clockwise press: "+" one time  
(The display should show a change of one degree)
3. To rotate one degree counterclockwise press: "-" one time  
(The display should show a change of one degree)
4. To rotate continuously clockwise: hold down "+"  
(The display should update with change of angle)
5. To rotate continuously counter clockwise: hold down "-"  
(The display should update with change of angle)
6. To rotate incrementally 10 degrees clockwise press: "10, +"  
(The display should change by 10)
7. To rotate incrementally 10 degrees counter clockwise press: "10, -"  
(The display should change by 10)
8. To go to positive 10 degree location press: "RUN, 10, +"  
(The display should show '10' with the "+" light on)
9. To go to negative 10 degree location press: "RUN, 10, -"  
(The display should show '10' with the "-" light on)
10. To clear the screen press: "0, 0"  
(The display should show the current turntable position)
11. You can stop a turntable motion at any time by pressing: "STOP"